


Essential Safety Notes!


- Switch off power during installation and maintenance.
- Do not attempt installation in wet or severe weather conditions.
- Protect cables from sharp edges and objects to prevent damage.
- Ensure unused connectors and fixtures are not exposed to harsh or wet weather conditions, this might lead to corrosion and malfunction.
- Fixtures and cables are IP and IK rated. Ensure that the installation environment complies with the specified protection ratings.

Fixation

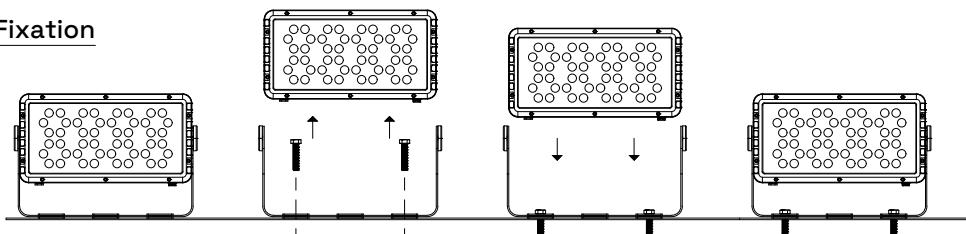


- Mount using the provided Ø13mm holes in the bracket. Recommended bolt: M12. Once fixed set the fixture to the desired angle and lock the mounting bracket with a 8mm allen key. (Max 30Nm)

Wiring

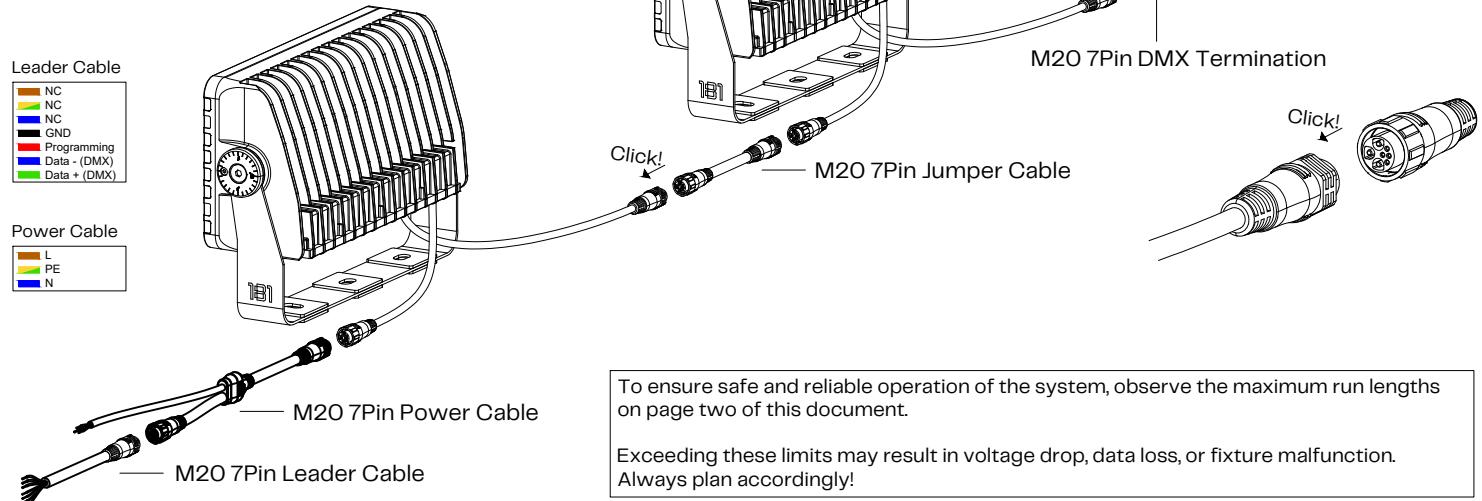

- Begin by connecting the leader cable from the DMX controller to the power cable and to the first fixture in the run.
- Connect each subsequent fixture's input connector to the previous fixture's output connector.
- Use jumper cables between fixtures if necessary.
- Finish by installing the end cap on the output connector of the last fixture to guarantee the required sealing.

Wiring Setup Example

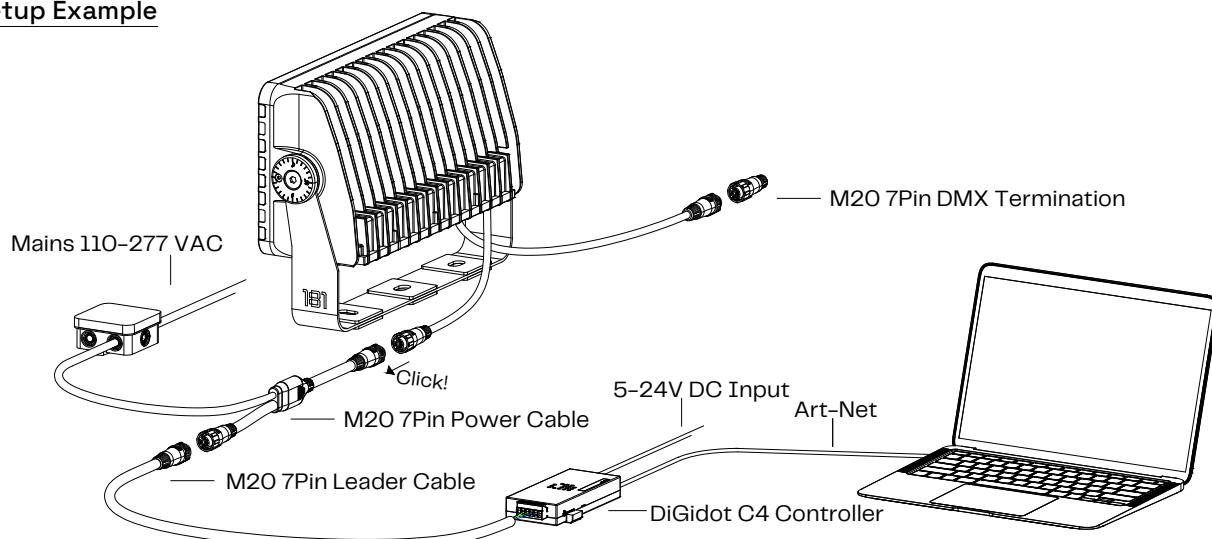

Maximum Run Length of fixtures for Data (units)	Data @40fps				Data@60fps				DMX RDM @45FPS				
	250 kbps	500 kbps	750 kbps	1000 kbps	250 kbps	500 kbps	750 kbps	1000 kbps					
White/Tunable White	171	341	512	683	85	171	267	341	85				
Multi Color RGBW	128	256	384	512	64	128	200	256	64				
Maximum Run Length Data including Leader and Jumper Cables (m)	300	220	180	150	300	220	180	150	300				
Maximum Run length of fixtures per dedicated power cable	5@115 VAC				10@230 VAC								
Maximum total length of Jumper cables per Power Cable (m)	20												
Maximum Leader Cable Length (m)	10												
Maximum Data Leader Cable Length (m)	300	220	180	150	300	220	180	150	300				